






MANUAL INSTRUCTION – English

Thank you for purchasing a probe 700 series.

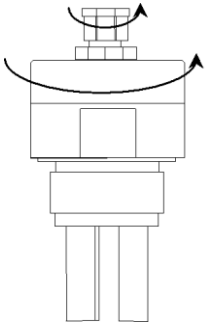

- Unscrew the cable gland nut
- Remove the locking cone
- unscrew the cover plate, with screwed the remainder of the gland

- Insert the cable into the nut-pole, by non-threaded part
- Insert the cable into the cone, from the largest
- Insert the cable into the lid
- Fasten the ends of each cable lug eyelet hole diameter 4mm
- Tighten the lug nuts with 4MA avoiding contact between them

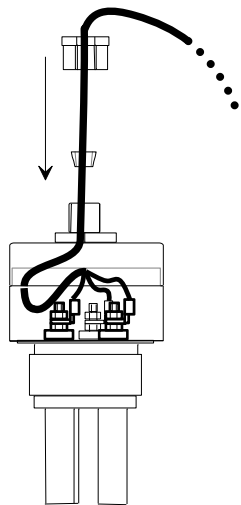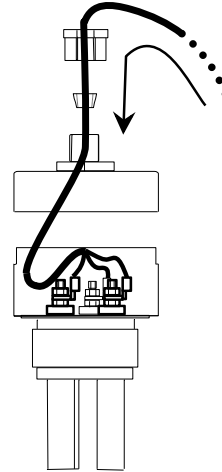

- Screw the lid to the bottom, leaving a good enrichment of cable inside
- Fit the cone in the gland on the cover sliding on the wire
- Slide the gland nut and screw up to block the sliding of the wire

In case of maintenance open the housing by operations in breach

